

LOADBAR WIDE®

INSTALLATION INSTRUCTIONS

1.



Use an 8 ft. (96 in.) 2x4 for trailers with an inside width of 99 - 102".

2.



Remove tape backing from the 1st Loadbar Wide. Adhere to wall against freight with the handle pointing AWAY.

3.



Insert 2x4 into installed Loadbar Wide. Place the 2nd Loadbar on the opposite end of 2x4. **DO NOT REMOVE TAPE BACKING.** Slide Loadbar into place.

4.



If the pressure is too great, remove half of one foam insert and reinstall. Repeat to other side if necessary. **NEVER REMOVE ALL FOAM.**


5.



Once level and in place, pull handle away from the wall. Peel back and remove the tape backing. Press part firmly against the wall.



IMPORTANT: Once Loadbar Wide is installed, it cannot be repositioned.

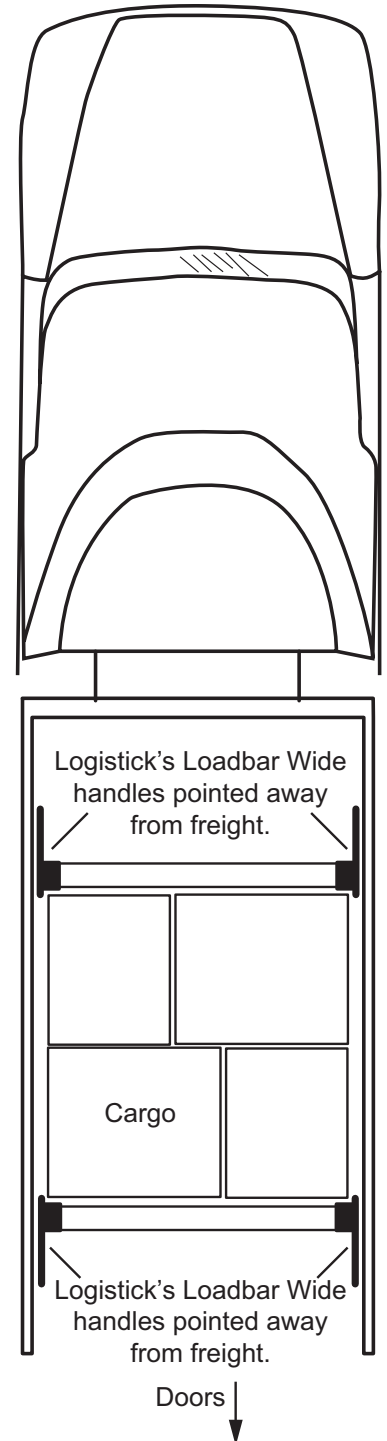

Scan for more details



Innovators of Freight Securement Systems®

800-758-5840

www.logistick.com